

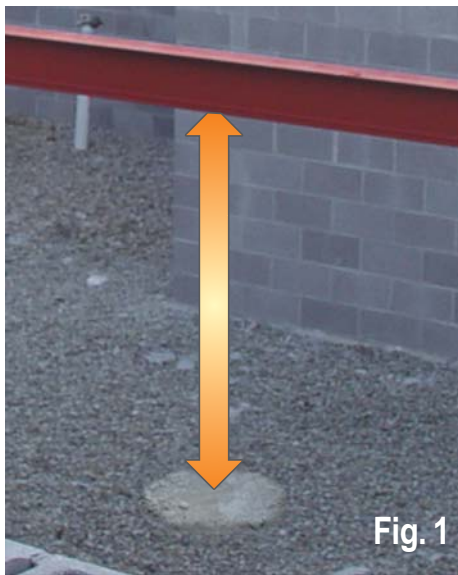


Fig. 1



Fig. 2



Fig. 3

**TIGER
BRAND®**
JACK POST®

Adjustable Columns

Installation Instructions

Installation Time: Approximately 15 Minutes

Tools Required: None

1. Choose the correct size and strength Adjustable Column for the project based on construction documents (Fig.1)
2. Adjust screw to slightly short of the length needed between footer and load carrying beam at installation location
3. Place Adjustable Column vertically between footer and beam with the adjustment nut and screw on the footer (adjustable end down)
4. Adjust screw to wedge the Adjustable Column between footer and beam, tighten until Adjustable Column is firmly centered directly under the load carrying beam and the footer below (Fig. 2)
5. Additional screw adjustments may be made during construction to keep floor level
6. Poured concrete basement floor permanently locks Adjustable Column adjustment (Fig.3)

TAMPER-PROOF ADJUSTMENT: ADJUSTABLE COLUMN IS INSTALLED WITH ADJUSTMENT NUT AND SCREW AT THE FOOTER.

Note: Always consult Local Building Codes for specific installation requirements in your area.